




FA 11 PH Meter Instructions

Layout

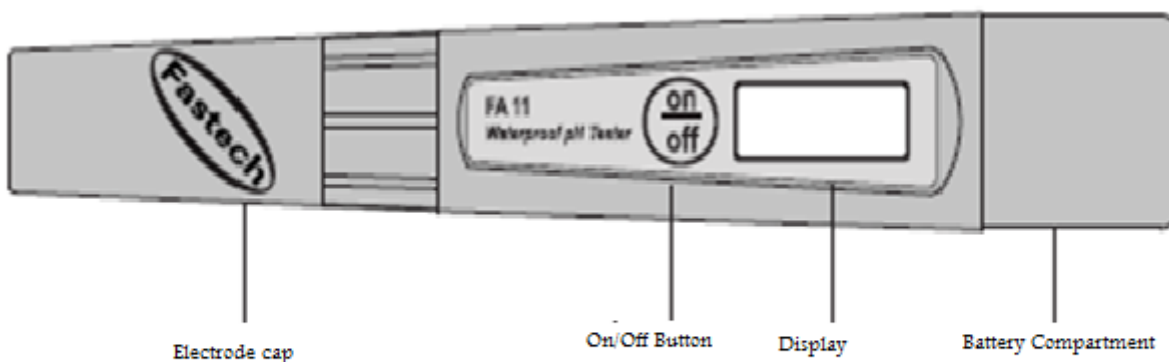

Setup / Calibration

- Switch on Meter by pressing the ON/OFF Button.
- Unscrew Battery Protective Lid and carefully lift out the Battery compartment to allow access to the Calibration Screw.



- Remove Electrode Cap and place probe into PH buffer 7 solution.
- Using the Supplied Screwdriver twist the screw to adjust the PH value, twist clockwise to reduce the value and anticlockwise to increase the value.

- Adjust until the Value reads 7.0 (if using PH buffer 7).
- Your PH Meter is now ready to use.